



B9 Core Series 530 & 550

USER MANUAL

B9Creations Core Operating Manual

© 2017 B9Creations, LLC

All Rights Reserved. "B9Creations" is a registered trademark of B9Creations, LLC used under a temporary license granted by B9Creations, LLC. Neither B9Creations, LLC nor any of its affiliates is responsible for the manufacturing of the product(s). No parts of this work may be reproduced in any form or by any means – graphic, electronic, or mechanical, including photocopying, recording, taping, or information storage and retrieval systems – without the written permission of the publisher.

Products that are referred to in this document may be either trademarks and/or registered trademarks of the respective owners. The publisher and the author make no claim to these trademarks.

While every precaution has been taken in the preparation of this document, the publisher and the author assume no responsibility for errors or omissions, or for damages resulting from the use of information contained in this document or from the use of programs and source code that may accompany it. In no event shall the publisher and the author be liable for any loss of profit or any other commercial damage caused or alleged to have been caused directly or indirectly by this document.

For reference, write the following information from the Product Information Label located on the back of your new printer here:

Model # _____ Serial # _____

Contents

1	B9Creations Core Series General Information	6
1.1	Declaration of CE Conformity	6
2	Instructions for Safe Use	7
2.1	Explanation of Symbols	7
2.2	Transport Damage.....	7
2.3	Operator's Obligations	7
2.4	Operations and Maintenance Log Book	8
2.5	Safety Information.....	8
3	Intended Use and Proper Operation.....	9
3.1	Intended Use	9
3.2	Proper Operation.....	9
4	Scope of Delivery/Finishing Kit Components.....	10
4.1	Scope of Delivery	10
4.2	Finishing kit components.....	11
5	Identification and Interface	12
5.1	Product Identification	12
5.2	Interface Elements	12
6	Transport and Installation	13
6.1	Transport.....	13
6.3	Hardware Setup.....	13
6.4	Software Setup	14
7	Operation.....	15
7.1	Turning the Printer “ON”	15
7.2	Waking the Printer from Stand-By Mode.....	15
7.3	Turning Printer “OFF”	15
7.4	Preparing the Printer for Extended Shut Down	15
7.5	“Function Button” Functions and Corresponding LED Ring Illumination Codes	15
7.6	Setup Troubleshooting.....	16
7.7	Interface Misuse	17
7.8	Configurations of Operations	17
7.8.1	Stand-Alone Configuration.....	17
7.8.2	Networked Configuration	17
8	Safety Features	18
8.1	Safety Features.....	18
8.2	Operational Safety Features	18
9	Core Series On-Board Application	18
9.1	Introduction	18

9.2	Icon Definition	18
9.3	Language Selection – Initial.....	19
9.4	Primary Menu.....	19
9.5	Connecting to a Network.....	19
9.5.1	Wi-Fi/Ethernet Selection.....	19
9.5.2	Advanced Ethernet Network Connection.....	20
9.5.3	Advanced Wi-Fi Network Connection.....	20
9.6	Adding a Print Object Via USB Device.....	21
9.7	Build Chamber Components.....	21
9.8	Inserting and Positioning DuraVat	21
9.9	Inserting and Securing Build Table.....	22
9.10	Printing an Object	22
9.10.1	Print Library.....	22
9.10.2	Material and Quality	23
9.10.3	Prepare for Printing.....	23
9.10.4	Printing	23
9.11	Removing the Build Table and Printed Object from the Printer	24
9.12	Removing the Printed Object from the Build Table.....	24
9.13	Changing Printer Name	24
9.14	Changing Printer Language	25
9.15	Password Protecting the Printer	25
9.16	Factory Reset.....	25
10	B9Create Desktop Application - Print Manager	25
10.1	Introduction	25
10.2	Initial Printer Set-Up.....	26
10.2.1	Automatic Connection	26
10.2.2	Manual Connection.....	26
10.3	Opening an Existing Print File	26
10.4	Transferring a Print File to a Printer	27
10.4.1	Transfer Via USB Device	27
10.4.2	Transfer Via Network Connection.....	27
10.5	Firmware Updates for B9Creations Core Series.....	27
10.5.1	Firmware Update Via USB Device	27
10.5.2	Firmware Update Via Network Connection.....	28
11	B9Create Desktop Application – Print Editor	28
11.1	Loading a File into the Print Editor	28
11.1.1	Adding an .STL file	28
11.1.2	Loading an Existing Print File into the Print Editor	29
11.2	Positioning and Scaling Models for Print Optimization.....	29
11.3	Add Supports.....	29
11.4	Slicing the Model.....	30
12	Maintenance and Care	30
12.1	Cleaning	30
12.1.1	Cleaning the Printer	30

12.1.2	General DuraVat Cleaning	30
12.1.3	Build Table Cleaning	31
12.2 Maintenance.....		31
12.2.1	Air Filters	31
12.2.1	Vat Replacement.....	32
12.3 Non-Repairable Items		32
13	Work Flow for Printing	33
14	Technical Data.....	33
14.1	B9Creations Core Series technical specifications:	33
14.2	Operating conditions	34
14.3	Recommended System Requirements	34
14.4	Information on Manufacturer and Electrical Specification – Product Label	34
15	Trouble Shooting Guide.....	35
16	Error Codes	38
17	Tips and Tricks.....	39
18	Service	39
19	Document History	40

1 B9Creations Core Series General Information

B9Creations Core is a 3-D Printing device supplied by B9Creations, LLC, Rapid City, SD, USA.

These working instructions apply to:

Type of machine	Description	Available Models
B9Creations Core Series	3D-DLP Printer for Photo Polymerization of Liquid Materials	Core 550 Core 530

B9Creations Core is an easily operated, high-precision, 3D printer to be used in accordance with manufacturer's instructions, utilizing only approved materials according to proper material settings.

B9Creations Core has an integrated controller installed inside printer casing. The software required for all the operations is pre-installed and ready for use.

The provided AC/DC power supply (either model #MeanWell GSM60A12-P1J or #MeanWell GSM90A12-P1M) has been tested and is considered part of the printing equipment.

1.1 Declaration of CE Conformity

B9Creations Core Series is a 3-Dimensional Printer designed, manufactured and certified according to the following directives, regulations and standards:

- RoHS
- FCC

We, B9Creations, LLC, herewith declare that a.m. device fulfills the basic safety requirements of mentioned standards, regulations and directives. In any case of non-authorized modification, abnormal use or misuse of this device or document B9Creations, LLC is not liable for any injury that may occur.